
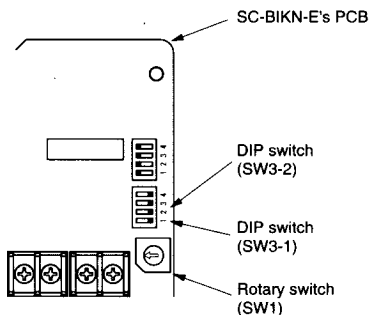


Cable connection for a V multi configuration installation

- ① Connect the same pairs number of terminal block "①,②,and ③"and " X and Y " between master and slave indoor units.
- ② Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW1 on SC-BIKN-E's PCB (Printed circuit board).
- ③ Set slave indoor unit as "slave 1" through "slave 3" by address switch SW3-1, 3-2 on SC-BIKN-E's PCB.
- ④ When the **AIR CON NO.** button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the **▲** or **▼** button.

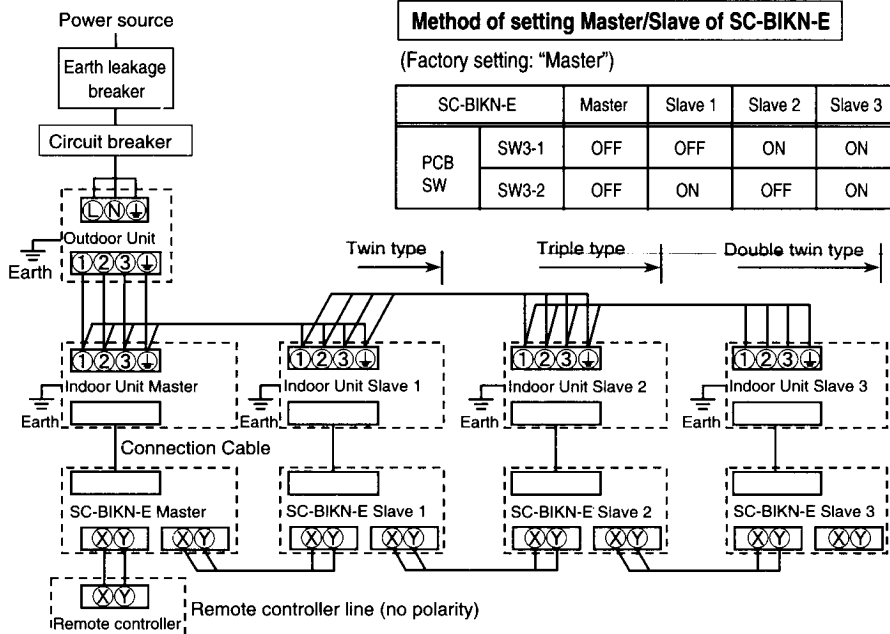

RKZ012A092